

# CopyFUN Pink Selfweeding


print instructions



Oilles  
Laser Printers & Copiers

- 1
  - A. Print: mirror image
  - B. Use: by-pass tray
  - C. Paper set: Extra heavy
- 2
  - A. Place T-shirt on press
  - B. Position printed side of the transfer on T-shirt
  - C. Cover transfer with the layer of polyester cloth [included in the package]
- 3
  - A. Now transfer image
  - B. Time: 20" - 25" sec
  - C. Temperature: 175°C
  - D. Pressure: Medium-High
- 4
  - A. Peel paper after 5 sec.
- 5
  - To finish off
  - A. Press again 30 sec
  - B. Cover with silicon sheet [included in the package]

For detailed printing information, hardware compatibility and video instructions visit our website:

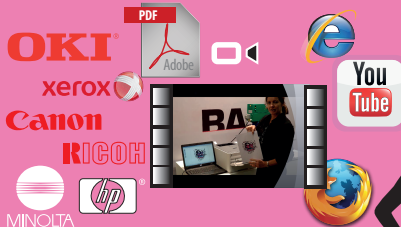

www.basicpaper.com

"CopyFUN Pink"  
a transfer paper  
you will love!!!!

This unique transfer  
does only print the  
image!

No more square  
polymer window,  
just toner.

It is very im-  
portant that your  
heat press has the  
right temperature!

Follow the print  
instructions as  
shown on the left.

\*Pink; the most  
creative paper on  
the planet!

# CopyFUN Pink



Before washing  
turn T-shirt inside out



Wash for delicate  
Use mild detergent



Hang to dry



Iron inside out  
with pressure on image

www.basicpaper.com